

# TAG mounting instructions


## Cars and light vans\*

\*up to size of Ford Transit or similar

Please remember that the tag is on loan to you. If you close your account or sell your car, the tag must be removed and returned to us. You will be charged if the tag is not returned.

**It is very important that your TamarTag is installed correctly for it to function properly.**  
Please follow instructions below carefully.

**1**

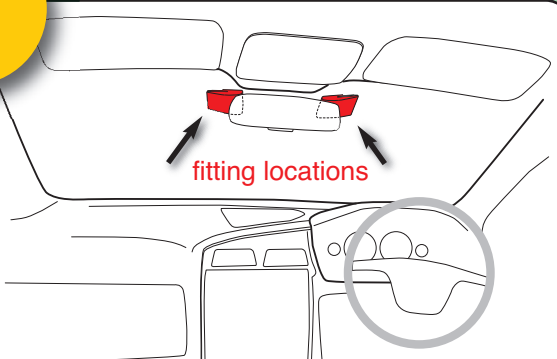


Use alcohol wipe supplied to clean inside windscreen at one of the two optional fitting locations shown above, and allow to dry.

**2**

Insert the Tag into the bracket holder - slide in as shown ensuring it clicks into place.




**3**

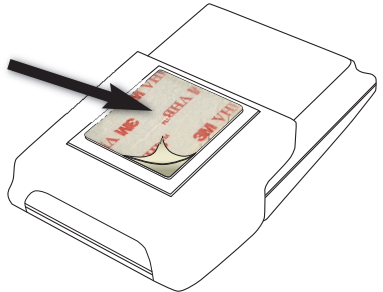

Peel back protective backing from adhesive pad.

**4**

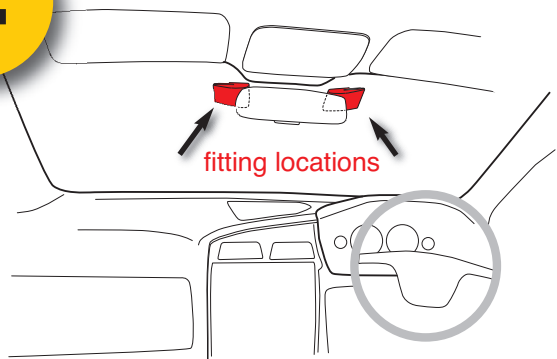


Position the Tag in the chosen location, cleaned as in 1 above, with the TamarTag logo horizontal, and fix by pressing adhesive pad firmly against glass and hold in position for one minute.

Certain cars and other light vehicles are fitted with metallised or re-radiating windscreens, which can interfere with the electronic tolling communications. These windscreens can usually be identified by the blue/copper appearance of the glass. Generally such windscreens have a window in the metallised area to allow Tags to communicate with toll equipment. If your vehicle is fitted with such a windscreen or are unsure whether it is so equipped, you must refer to your vehicle's manual and/or service agent.

**For further information . . .**

*or if in doubt about fitting the Tag please telephone Customer Services on 01752 361577*

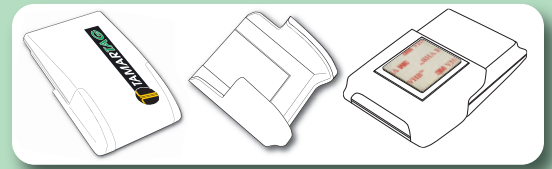

# TAG mounting instructions


## Heavy goods vehicles and buses\*

\*larger than Ford Transit or similar

Please remember that the tag is on loan to you. If you close your account or sell your car, the tag must be removed and returned to us. You will be charged if the tag is not returned.

**It is very important that your TamarTag is installed correctly for it to function properly.**  
Please follow instructions below carefully.


**1**

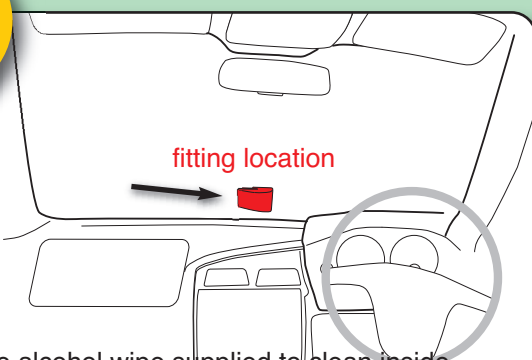

fitting location

Use alcohol wipe supplied to clean inside windscreen at the fitting location shown above, central and about 5cm (2 inches) above windscreen frame, and allow to dry.


**2**

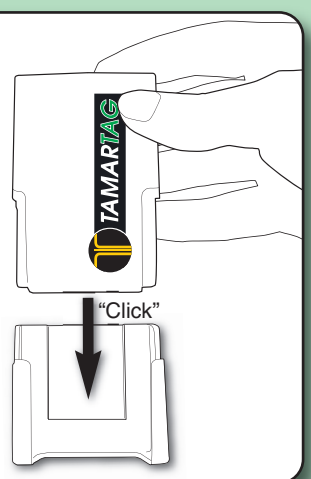

Insert the Tag into the bracket holder - slide in as shown ensuring it clicks into place.


"Click"

**3**

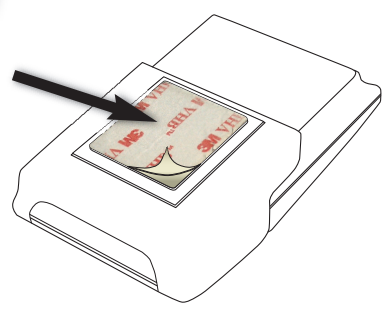

Peel back protective backing from adhesive pad.

**4**

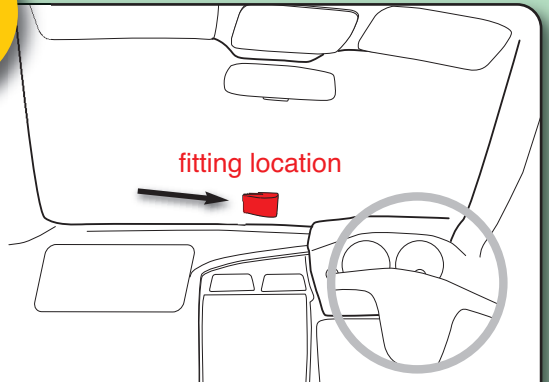

fitting location

Position the Tag in location, cleaned as in 1 above, with the TamarTag logo horizontal, and fix by pressing adhesive pad firmly against glass and hold in position for one minute.

Certain vehicles are fitted with metallised or re-radiating windscreens, which can interfere with the electronic tolling communications. These screens can usually be identified by the blue/copper appearance of the glass. Generally such screen types have a window in the metallised area to allow Tags to communicate with toll equipment. If your vehicle is fitted with such a screen or are unsure whether it is so equipped, you must refer to your vehicle's manual and/or service agent.

**For further information . . .**

*or if in doubt about fitting the Tag please telephone Customer Services on 01752 361577*